

OPERATION
SAFETY
SERVICE
WARRANTY
CONTACT
SPECIFICATIONS
TROUBLESHOOTING

Big Bear BB-3

Instruction Manual



THANK YOU FOR PURCHASING A B-AIR PRODUCT.

Introduction to Big Bear BB-3

Your new B-Air Big Bear BB-3 is a powerful 2 speed 3/4 Horsepower blower producing over 5200 CFM while drawing a minimal 7 amps.

The Big Bear 3 offers a wide base for stability, pre-drilled 5/16" hole for lighting systems and built in pull strap for easy moving.

B-Air Big Bear BB-3 Blower

- Delivers over 5200 CFM of directional air flow
- Safety Screens on Open Vents
- Built-In Carrying Handles
- Built-In Pull Strap for Easy Moving
- Wide Base for Stability
- Built-In Locking Wheels
- Pre-drilled 5/16" Hole In Center of Fan Grill to Accommodate Lighting Systems.
- 15ft Cord Wrap Assembly.

Operation/Use

- Carefully place the Big Bear BB-3 unit on a stable, flat and dry surface during operation.
- The Big Bear BB-3 is equipped with a 2" Velcro strip around the outer perimeter of the fan's exhaust port.
- The Big Bear BB-3 operation must be supervised and monitored at all times.

Power Requirements

Cords

Use 3 pronged adaptors that are UL and CE approved and no less than 16-3 with Ground Fault Circuit Interrupter (G.F.C.I.). Do not use cords that show any kind of wear or damage. Cords are not covered by warranty.

Warning!

The total amperage of the B-Air Big Bear Blower plus all other devices plugged into the receptacle must not exceed 12 amps.

Servicing

In order to receive service or replacement parts under warranty, you must:

- a.Call for an RMA (Return Merchandise Authorization Number)
- b.Have proof of purchase

Upon inspection, we will advise you of the repairs needed and the cost (if applicable). B-Air will issue repair or replacement parts depending on warranty.

Safety Information

- Do not put fingers or other objects in the unit while in operation and / or plugged in.
- To avoid electric shock, do not operate the unit in pooled water.
- The motor must be kept dry at all times. If the unit becomes wet, thoroughly dry it before the next operation.
- Use only a grounded plug or extension cord to avoid risk of electric shock or fire.
- Never use a cord showing any kind of damage or wear.
- Make sure the power source is sufficient to meet the requirements of the air mover.
- To prevent the unit from overheating, keep all air intake vents clear at all times.
- Clogging or blocking the air intake vents could result in a fire or electrical hazard.
- Do not remove any screens or safety guards from the unit.
- Do not operate the unit close to any dangerous areas, such as explosive gas, flammables, heaters and unventilated environments.
- Do not use aftermarket speed control devices.
- Do not use unit if showing damage.
- Before cleaning or servicing, unplug the unit.
- Unplug unit when not in use.
- Do not allow children to play with or near the unit.
- Do not sit or stand on the unit.
- Do not operate units in stacked position.
- Do not expose unit to rain, water or snow.
- Make sure that hands are dry before handling the unit or power cord.
- Units must be connected to a G.F.C.I. (Ground Fault Circuit Interrupter) protected receptacle.
- All units must be monitored while in use.
- Only a qualified electrician should attempt to repair / replace any electrical components.

Limited Warranty

Warranty covers against defects in material and craftsmanship used under normal intended use to original purchaser for a term of (1) one year from the original date of purchase including parts, labor and 1 way shipping. Housing is covered for a term of (5) five years from the date of the original purchase.

Important!

Warranty does not cover signs of misuse including, but not limited to rough handling, abuse, tampering, improper voltage use and unauthorized maintenance and repairs.

Troubleshooting

PROBLEM	POSSIBLE CAUSE	SOLUTION
Motor Not Running	a) Switch is OFF b) Bad Outlet c) Faulty Switch/Cord	a) Turn Switch ON b) Check Outlet/ Change to Another Outlet c) Call Factory for new Switch/Replace Cord
Scraping Noise From blade	a) Fan blade loose	a) Call Factory for Replacement Advise

Specifications

Power	3/4 Horsepower Electrical Motor
CFM	Approximately 5200 CFM
Cord	15 ft Power Cord
Current Draw	7/8 Amps
Voltage	115 Volts
Weight	35 lbs
Speeds	2 Speed

WARRANTY REGISTRATION

Please complete and mail or fax your product warranty registration card. For multiple units, please list serial numbers on a separate sheet.

THIS WARRANTY CARD AND YOUR BILL OF SALE MUST BE PRESENTED FOR WARRANTY SERVICE.

Your Company Name _____

Contact Name _____ Title _____

Address _____

City _____ State _____ Zip _____

Phone _____ Fax _____

E-mail _____

BIG BEAR BB-3

Serial Number _____ Date of Purchase ____ / ____ / ____

Purchased From _____

Additional Comments/Suggestions _____



B-Air

550 South Ayon Ave. Azusa, CA 91702

1-877-800-2247 (BAIR)

Fax: (626) 385-3307

Email: info@b-air.com

Web site: www.b-air.com

PLACE
STAMP
HERE



550 South Ayon Ave
Azusa, CA 91702